



t0	START_DELAY	1s	
t1	IMMO_TIME	3s	if after t10 engine stoped go to t11
t2	BUTTO_PESTART_LEN	2s	
t3	STOP_PEDAL_DEL	4s	
t4	BUTTON_START_DEL	5s	
t5	BUTTON_START_LEN	6s	
t6	BUTTON_STOP_DEL	7s	
t7	BUTTON_STOP_LEN	2s	
t8	SESION_DEL	5s	
t9	BUTTON_STOP_FIN_LEN	2s	
t10	FIN_DEL	5s	if after t10 engine still running go to t9 (max 3 tries if engine still runing go to t11)
t11	FIN_LEN	1s	

note * immobilizer deactivation output may be turned off after successful engine start see function FN61

Initial conditions for remote start:

- system armed
- perimeter zones closed
- no alarm at the moment
- was no alarm from perimeter zones
- handbrake applied (optional)
- no ID card (optional)
- neutral rezervation procedure finished (MT only)